PANERAI

Istruzioni/Instructions

PANERAI

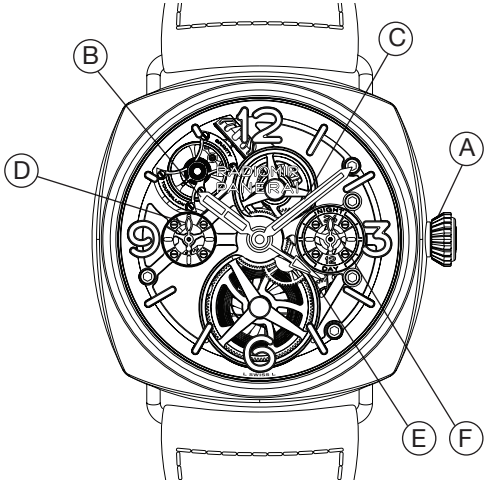

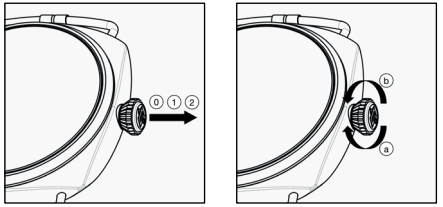

(A) WINDING CROWN **(B)** HOURS **(C)** MINUTES **(D)**SMALL SECONDS **(E)** SECOND TIME ZONE **(F)**AM/PM INDICATOR **(G)** POWER RESERVE INDICATOR

PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY. ACTUAL PRODUCT MAY VARY.

INSTRUCTIONS FOR USE

WINDING THE WATCH

1. Release the winding crown **(A)** by unscrewing it and without pulling it out **(position 0)**, wind it clockwise **(a)** about ten times for partial winding.
Turning in the other direction has no effect.
2. Lock the winding crown by screwing it again to ensure waterproofness.

Note: The watch has an automatic mechanical movement with a 3-day power reserve. If the watch has stopped running, it is recommended to partially wind it manually before wearing and using it again. When the watch is fully winded, winding the crown has no effect on the mechanism.

SETTING THE TIME

1. Release the winding crown **(A)** by unscrewing it and pulling it out to the second click **(position 2)**.
2. Ensure that the local time hour hand **(B)** is overlapping the second time zone hand **(E)**. If this is not the case, return the winding crown **(A)** to the first click (position 1). In this position the local time hour hand **(B)** moves forwards or backwards in steps of one hour. Make the local time hour hand **(B)** coincide with that of the second time zone **(E)**. Then return the winding crown **(A)** to the second click **(position 2)** to set the correct time.
3. Based on the current local time, verify that the hand (F) in the small dial at 3 o'clock indicates the correct time period (AM or PM). If it is not in the correct period, move the local time hour hand **(B)** until the hand (F) is on the correct side (AM or PM).
4. Return the winding crown **(A)** to the initial position **(position 0)** and screw it again.

Note: For a rapid change of the time, pull out the winding crown **(A)** to the first click **(position 1)**. In this position, the hour hand **(B)** moves forwards or backwards in steps of one hour without moving the minute hand **(C)**.

THE GMT FUNCTION

The GMT (Greenwich Mean Time) system, also known as universal time and adopted throughout the world, divides the terrestrial globe into 24 one-hour sections (time zones), each equivalent to 15° of longitude. The Greenwich meridian was taken as the fundamental reference meridian for the localisation of time zones by the international conferences held in Rome in 1883 and in Washington in 1884.

Starting from meridian zero (or Greenwich meridian), 24 time zones have been defined, from 0 to +12 towards the east, and from 0 to -12 towards the west. The zero meridian has a very important function for sailors: the time at Greenwich is the reference for the calculations which enable the longitude at sea to be determined, and thus the establishment of the ship's exact position. The GMT function enables the local time and the time in another country (home time) to be read at the same time.

SETTING THE SECOND TIME ZONE (GMT FUNCTION)

1. Release the winding crown **(A)** by unscrewing it and pulling it out to the first click **(position 1)**. In this position, the local time hour hand **(B)** moves forwards or backwards in steps of one hour without moving the minute hand **(C)**.
2. Set the local time required. The local time hour hand **(B)** should indicate the current location time.
3. Push back the winding crown **(A)** to the initial position **(position 0)** and screw it again.

The hand of the second time zone **(E)** will indicate the home time (country of origin). This hand moves at the same rate as the local time hour hand **(B)**, carrying out a complete rotation in 12 hours. On the small dial at 3 o'clock, the hand **(F)** displays the GMT time (home time) to be able to know whether it is in the morning (AM) or afternoon/evening (PM).

PANERAI

©2022 Officine Panerai AG

Officine Panerai Marketing & Comunicazione
Viale Monza, 259 - 20126 Milano - Italy
www.panerai.com

panerai.com